



Logitech G502 Proteus Core Scroll Wheel Replacement

The default scroll wheel is made of metal and may be a bit noisy for some. Follow this guide if you wish to remove your wheel or replace it.

Written By: Sage Farray





TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Scroll Wheel](#) (1)

Step 1 — Scroll Wheel



- Flip the mouse over to access the feet.

Step 2




- Use your fingers or a nylon spudger to remove the specified mouse feet in order to reveal the screws.

Step 3




- Use a #00 Philips screw bit to remove the indicated 12.5mm screws.

Step 4

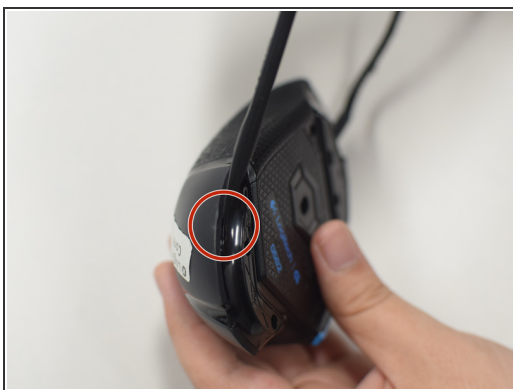



- Use a nylon spudger to pry the top shell from the bottom of the mouse.

Step 5

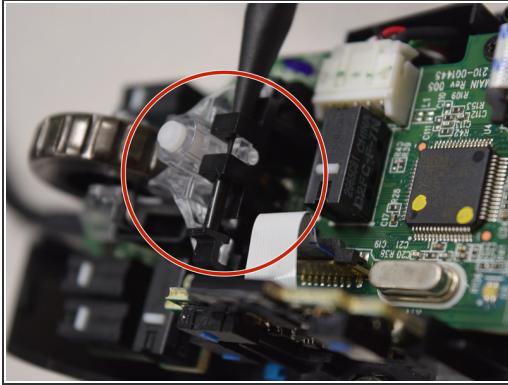

- Use a nylon spudger to push the fastener pin free.

Step 6

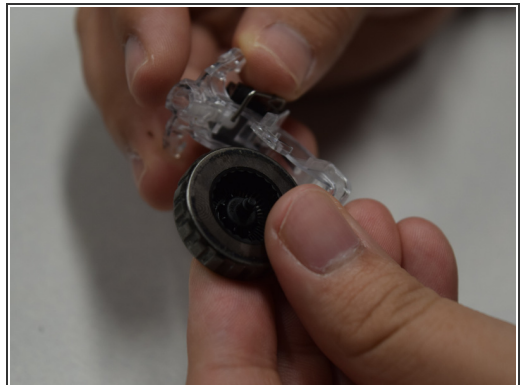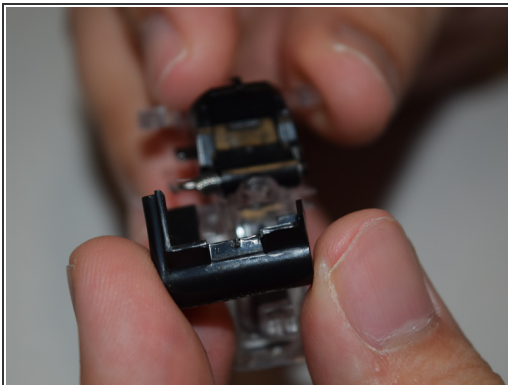

- Once the pin is removed, use a #00 Phillips screw bit to remove the 7.5mm screw from the scroll wheel holder.
- Once the plastic scroll wheel holder is off, the scroll wheel is free and can be lifted out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-31 08:43:08 PM.